



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for KITCHENAID 5KPM5EER. You'll find the answers to all your questions on the KITCHENAID 5KPM5EER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KITCHENAID 5KPM5EER
User guide KITCHENAID 5KPM5EER
Operating instructions KITCHENAID 5KPM5EER
Instructions for use KITCHENAID 5KPM5EER
Instruction manual KITCHENAID 5KPM5EER

KitchenAid® **BOWL-LIFT MIXERS**

MIXERINSTRUCTIES

MIXER INSTRUCTIONS

ROBOTS DE CUISINE : MODE D'EMPLOI

KÜCHENMASCHINEN-ANWEISUNGEN

MIXER - ISTRUZIONI

INSTRUCCIONES DE BATIDORA

BRUKSANVISNING KÖKSMASKIN

BRUKSANVISNING KJÖKKENMASKINER

YLEISKONEEN KÄYTTÖOHJEET

BRUGSANVISNING KØKKENMASKINE

INSTRUÇÕES DA BATEDEIRA MULTIFUNÇÕES

ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ



[You're reading an excerpt. Click here to read official KITCHENAID 5KPM5EER user guide](#)

<http://mypdfmanuals.com/dref/5516490>

Manual abstract:

Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment. The use of attachments not recommended or sold by KitchenAid may cause fire, electrical shock or injury. Do not use the Stand Mixer outdoors. Do not let the cord hang over edge of table or counter. Remove flat beater, wire whip or dough hook from Stand Mixer before washing. The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance. 7. 8. 9.

10. 11. 12. SAVE THESE INSTRUCTIONS Electrical Requirements Your Stand Mixer operates on a regular 220-240 volt A.C., 50/60 hertz house current. The wattage rating for your Stand Mixer is printed on the trim band. This wattage is determined by using the attachment which draws the greatest power. Other recommended attachments may draw significantly less power. Do not use an extension cord.

If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance. **WARNING Electrical Shock Hazard** Plug into a grounded outlet. Do not remove ground prong. Do not use an adapter. Do not use an extension cord. Failure to follow these instructions can result in death, fire, or electrical shock. 1 English Bowl-Lift Stand Mixer Features Motor Head Attachment Hub (see page 11) English Speed Control Knob O 1 2 4 6 8 10 Attachment Knob Bowl-Lift Handle (not shown) Bowl Height Adjustment Screw Spring Latch and Bowl Pin (not shown) Beater Shaft Stainless Steel Bowl Bowl Handle Locating Pins Bowl Support Flat Beater Wire Whip PowerKnead™ Spiral Dough Hook 2 Assembling Your Bowl-Lift Mixer To Attach Bowl 1. Turn speed control "O". 2. Unplug Stand Mixer or disconnect power.

3. Place bowl-lift handle in down position. 4. Fit bowl supports over locating pins. 5. Press down on back of bowl until bowl pin snaps into spring latch. 6. Raise bowl before mixing. 7. Plug into proper electrical outlet.

Pin 4. Turn beater to left, hooking beater over the pin on shaft. 5. Plug into proper electrical outlet. To Remove Flat Beater, Wire Whip, or Dough Hook 1. Turn speed control "O". 2. Unplug Stand Mixer or disconnect power. 3. Press beater upward and turn right.

4. Pull beater from beater shaft. Stand Mixer Speed Control Raise To Raise Bowl 1. Rotate handle to straight-up position. 2. Bowl must always be in raised, locked position when mixing. To Lower Bowl 1. Rotate handle back and down. To Remove Bowl 1. Turn speed control "O".

2. Unplug Stand Mixer or disconnect power. 3. Place bowl-lift handle in down position. 4. Remove flat beater, wire whip, or dough hook. 5. Grasp bowl handle and lift straight up and off locating pins. To Attach Flat Beater, Wire Whip, or Dough Hook 1. Turn speed control "O".

2. Unplug Stand Mixer or disconnect power. 3. Slip flat beater on beater shaft. 3 O 1 2 4 6 8 10 The Soft Start™ feature minimizes splash-out by starting the mixer slowly before increasing to the selected speed.

To further reduce the potential for splash-out, always begin mixing using Speed 1 (STIR speed), then gradually move to higher speeds as needed. See page 7 for "Speed Control Guide." Auto-Reset Motor Protection If the Stand Mixer stops due to overload, slide the speed control lever to "O". After a few minutes, the Stand Mixer will automatically reset. Slide the speed control lever to the desired speed and continue mixing.

If the unit does not restart, see "When You Need Service" on page 12. English Assembling Your Pouring Shield* To Attach Wide Mouth Pouring Shield (fits all 6-quart bowl-lift models) 1. Turn speed control "O" 2. Unplug Stand Mixer or disconnect power. 3. Place bowl-lift handle in down position. 4. Attach desired accessory (flat beater, dough hook or wire whip) and bowl. 5. Place bowl-lift handle in up position.

6. Slide pouring shield collar around beater shaft, centering collar over rim of bowl.



[You're reading an excerpt. Click here to read official KITCHENAID 5KPM5EER user guide](http://mypdfmanuals.com/dref/5516490)
<http://mypdfmanuals.com/dref/5516490>

Then, rotate opening in collar toward front of Stand Mixer. To Attach Pouring Shield (fits all 5-quart bowl-lift models) 1. Turn speed control "0". 2. Unplug Stand Mixer or disconnect power. 3. Place bowl-lift handle in down position. 4. Attach desired accessory (flat beater, dough hook or wire whip) and bowl..



[You're reading an excerpt. Click here to read official KITCHENAID](#)

[5KPM5EER user guide](#)

<http://mypdfmanuals.com/dref/5516490>